
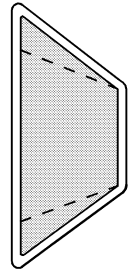
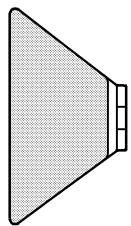
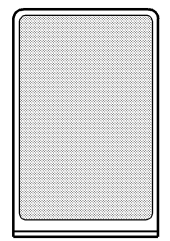



TYPICAL DELINEATORS

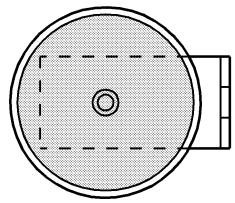

GENERAL NOTES


- 1- USE A MINIMUM 7 SQ. IN. REFLECTIVE AREA FOR SIDE MOUNTED DELINEATORS.
- 2- USE A MINIMUM 28 SQ. IN. REFLECTIVE AREA FOR TOP MOUNTED BARRIER DELINEATORS.
- 3- USE A MINIMUM 7 SQ. IN. REFLECTIVE AREA FOR TOP MOUNTED GUARDRAIL DELINEATORS.
- 4- USE ADHESIVE, CLIP ON GUARDRAIL POST, GUARDRAIL BOLTS, POWER DRIVEN FASTENERS, OR OTHER MOUNTING METHODS RECOMMENDED BY THE MANUFACTURER AS APPROVED BY THE ENGINEER.

MOUNTING DETAILS

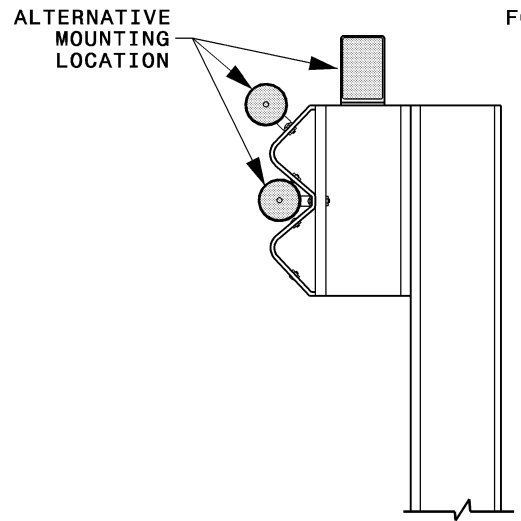


FOR WORKZONE APPLICATIONS
UNLESS A GLARE SCREEN
IS UTILIZED

USE EITHER MOUNTING
LOCATION FOR PERMANENT
APPLICATIONS

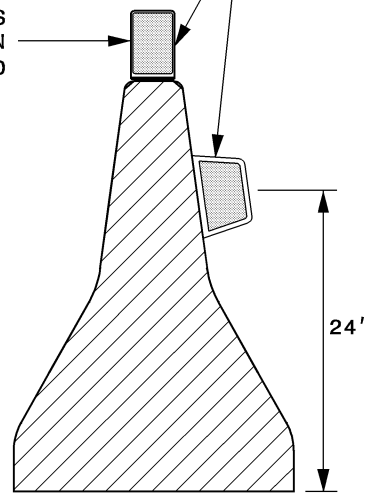

TYPICAL POWER DRIVEN FASTENER
INSTALLATION FOR BARRIER

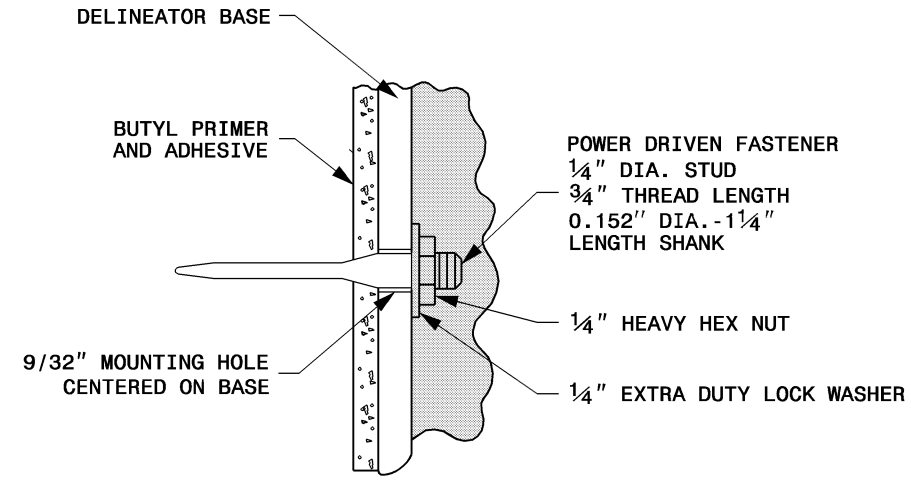

PAINT THE EXPOSED PORTIONS OF THE NUT, LOCK WASHER, AND
POWER DRIVEN FASTENERS WITH ZINC-RICH PAINT TO MEET THE
ENGINEER'S APPROVAL AFTER INSTALLATION OF THE ASSEMBLY.